

UNPACKING & SCANNING

The brown box contains 10 Logitech Pen styluses, each in its own bag.

- Open the brown box, remove each wrapped stylus and take it out of the bag.
- Record the unique serial number marked directly on each stylus for asset management and warranty purposes.

INITIAL CHARGING

Plug the standard USB-C cable that's common with Chromebooks into the stylus to bring it to a full charge. This should take no more than 30 minutes.

- A white blinking light indicates the stylus is charging.
- A solid white light indicates the stylus is fully charged. Once charged, the product is ready for use.

TIP REPLACEMENT

Should the tip stop writing, it can be easily replaced as follows:

- 1** Pinch the tip with a standard or needle-nose pliers and pull to remove.
- 2** Hold the new tip with your fingers and push into place.
- 3** If you are unable to push it all the way, get it in as far as possible and then, press the tip of the stylus onto a table surface to push in the remaining way.

STORAGE AND TRANSPORTATION

If you purchased the optional Logitech Pen Loop:

- 1** Remove it from the packaging.
- 2** Unpeel the adhesive and apply to the back of the Chromebook screen.
- 3** Put the Logitech Pen into the loop.

If you do not have the optional Loop, simply store the stylus as you would any pen or pencil.

CLEANING

Spray cleaning liquid onto cloth and wipe.

- Do not spray directly onto the stylus.
- Use water-based cleaners with a ratio of 70% isopropyl alcohol to 30% water.
- Do not use other alcohol-based cleaners or bleach.

Learn more at

logitech.com/support/EDU-Contact-Us